

The Butler Package®

From Bathroom to Spa

We've made it easy to choose the right Mr.Steam® system for your lifestyle.

The Mr.Steam Butler Package combines some of the best Mr.Steam controls and accessories. Mr.Steam offers two Butler Packages, depending on the steam generator model selected.

All Butler packages are available in designer finishes, with a choice of square or round styles for the solid brass iTEMPO/Plus® control.

BUTLER PACKAGE 1

Suitable for models MS90E through MS SUPER 3E steam generators:

- (1) iTEMPO/Plus® control
- (1) AromaSteam Steamhead
- (1) AutoFlush® System
- (1) iGenie™ Control
- (1) Drip Pan

BUTLER PACKAGE 2

Suitable for models MS SUPER 4E through MS SUPER 6E steam generators:

- (1) iTEMPO/Plus® control
- (2) AromaSteam Steamhead
- (2) AutoFlush® System
- (1) iGenie™ Control
- (2) Drip Pan

NOTE: FOR ILLUSTRATIVE PURPOSES ONLY.

IMPORTANT: See the Mr. Steam Installation, Operation and Maintenance Manual, PUR 100472 for details.

Click here to download this manual:

<http://www.mrsteam.com/support/downloads.html>

iTEMPO/Plus control



AromaSteam Steamhead



AutoFlush System



iGenie Control



Drip Pan



iTEMPO™ CONTROLS

Dimensional Information for the Round and Square iTempo™ and iTempo/Plus™

BOX CONTENTS:

- iTempo™ or iTempo/Plus™ Control
- Control Cable (30 ft.)
- Steam head
- Tube of Silicone Sealant
- Owner's Manual

iTempo® controls flush mount in the steam/shower enclosure through a $2\frac{5}{8}$ " wide x $3\frac{7}{8}$ " high hole. iTempo controls can also be surface mounted. They are suitable for use with an available iGenie® control. All iTempo controls come standard with solid brass covers in round or square designs. Available in the most popular designer finishes or custom plated as listed below.

iTempo® controls are suitable for use inside or outside the steam/shower enclosure, featuring:



- Solid brass decorative cover with choice of square or round styles in designer finishes
- Digital display for temperature setting
- Programmable temperature
- Includes AromaSteam steamhead in matching finish
- Compatible with iGenie®
- Soft touch keypad with ON/OFF modes
- Low voltage operation

The iTempo controls are designed to be installed inside or outside the steam room but is primarily installed inside the steam room. If the control is installed inside the steam room the control must be located:

- 4-5 feet above the floor
- The control features an integral temperature sensor. Locate the control in a location representative of the desired steam bathing temperatures. Do not locate the control above or near the steam head or direct steam emissions.
- on a vertical wall

The control cable length is 30 feet. Insure that the control and/or steam generator are located accordingly. Contact a Mr.Steam technical service representative if a longer cable is required. Contact Mr.Steam for optional 60 ft. cable, PN 103990-60. If the control is installed outside the steam room a Remote Temperature Probe Part Number MSTS must be installed inside the steam room.

iTEMPO/Plus Controls are available in the following designer finishes: Polished Chrome, Polished Nickel, Brushed Nickel, Polished Brass, Oil Rubbed Bronze and Custom Plating.

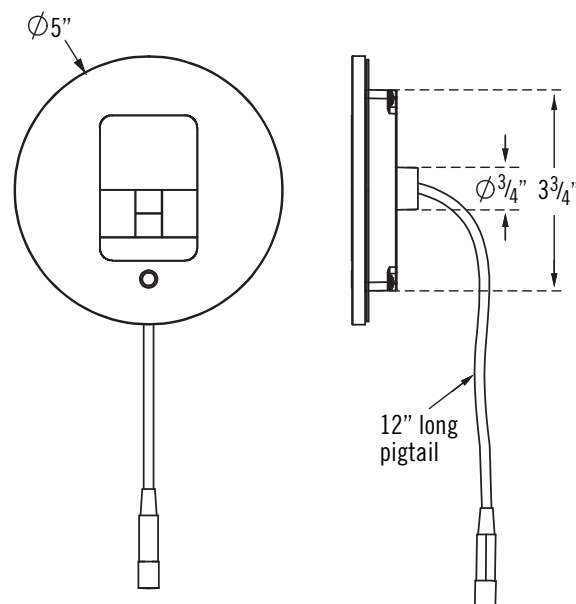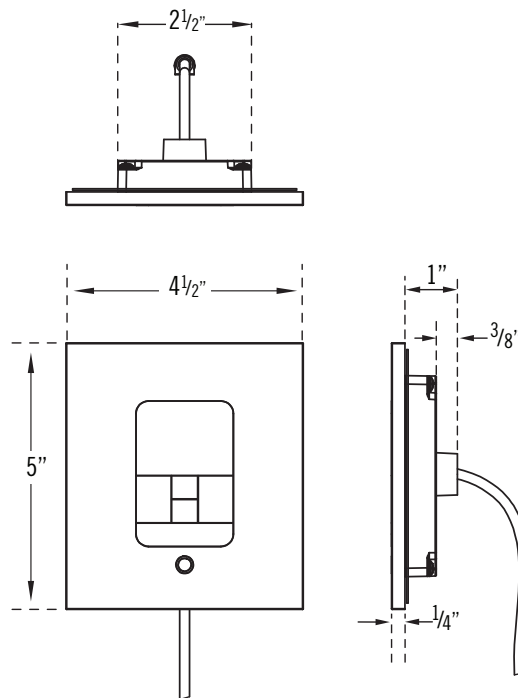

NOTE: FOR ILLUSTRATIVE PURPOSES ONLY

IMPORTANT: See Mr.Steam® Installation, Operation and Maintenance Manual, PUR 100472, for details.

Click here to download this manual:

<http://www.mrsteam.com/support/downloads.html>

Steamhead

ROUND 103937 / SQUARE 104040 / ISTEAM104104

For remote starting of Mr. Steam® steam generator and pre-heating of steam/shower from outside the steam room from almost any location within the home. Uses no additional electrical energy, provides remote start-up at the touch of a finger.

Installing the Round & Square AromaSteam Steamhead

STEAM HEAD INSTALLATION (1/2" NPT)

IMPORTANT: Do not disassemble steamhead. Mr.Steam's steamhead is shipped fully assembled and requires no additional assembly.

CAUTION Because the steam head and direct steam emissions are very hot, locate the steam head where incidental contact by bather with the steam head or direct steam emission cannot occur.

NOTE: A 1.5" clearance hole around the steam pipe is needed to mount the steamhead.

Locate steam head 6-12 inches above floor, except for:

- Tub/shower enclosures, install 6 inches above tub top edge.
- For enclosures with acrylic or other non-heat resistant flooring install Acrylic Shield Part Number 103938 /10398SQ




IMPORTANT NOTE: To preserve steam head finish, do not use wrench or other tools to tighten. DO NOT use abrasive cleansers or chemicals. Use only water with mild soap and a non-abrasive sponge.

CAUTION Consult with supplier of acrylic, fiberglass and other non-heat resistant enclosures for recommended steamhead location. Use Acrylic Shield PN 103938 /103938SQ. See instructions provided with steam shield. (An acrylic shield is not available for the iSteam steamhead.)

NOTE: FOR ILLUSTRATIVE PURPOSES ONLY.

IMPORTANT: See the Mr. Steam Installation, Operation and Maintenance Manual, PUR 100472 for details.

Click here to download this manual: <http://www.mrsteam.com/support/downloads.html>

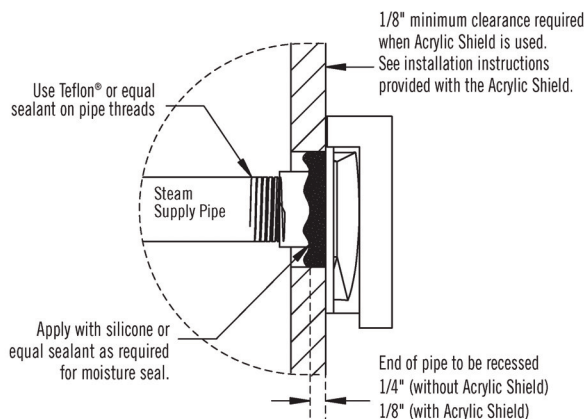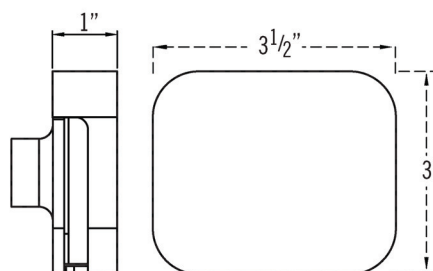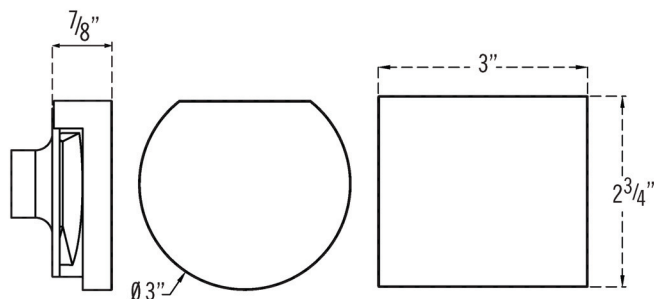


iGenie™

BOX CONTENT

- iGenie™
- iGenie Wall Mount
- Interface Module
- 5 ft. Module Connection Cable
- 2 Module mounting Screws
- Installation and Operation Instructions

iGENIE INTERFACE MODULE INSTALLATION

- Connect the iGENIE INTERFACE MODULE to the generator by plugging in the provided 5 foot cable to the iGENIE INTERFACE MODULE and the Steam Genie connector on the side of the generator as shown.
- Mount the iGENIE INTERFACE MODULE in a dry, indoor location. For maximum range, the Steam Genie Interface Module should be mounted as high as practical and away from metal that could effect the radio signal. Securing it to a nearby wood stud is ideal. The antenna should be pointing upwards.

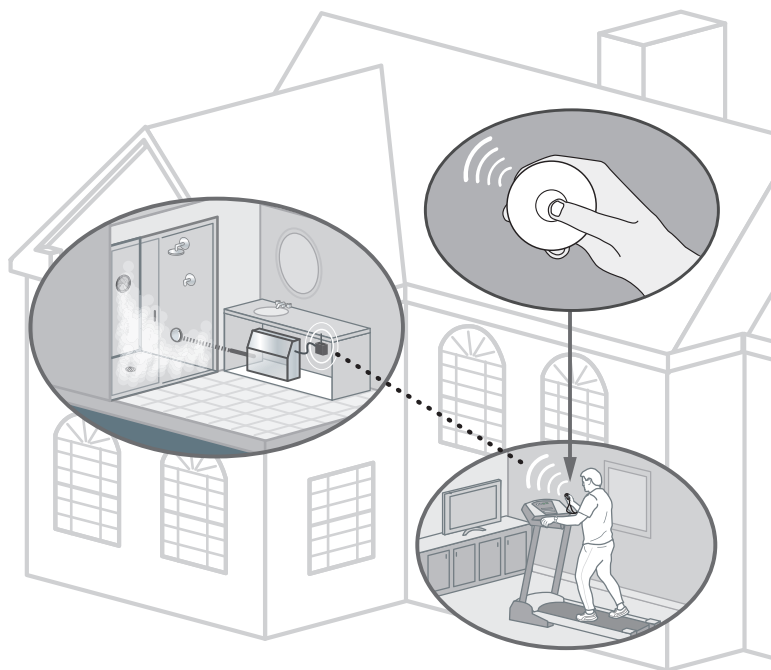

iGENIE OPERATION

- When the Steam Genie FOB light is off, press the button once and the Steam Genie FOB light indicates if the steam is on or off. When you press the button, the light will momentarily twinkle between red and green. A red light indicates that the steam is off and a green light indicates that the steam is on.
- To turn the steam on or off, press the ON/OFF button again while the light is illuminated. After a short delay the light will change from red to green (steam on) or green to red (steam off).

NOTE: FOR ILLUSTRATIVE PURPOSES ONLY.

IMPORTANT: See Mr.Steam® Steam Genie Installation, Operation and Maintenance Manual, PUR 100449, for details.

Click here to download this manual:

<http://mrsteam.com/products/technical-downloads.html>

AutoFlush®

AutoFlush Shown Fully Assembled


Box Contents

- AutoFlush Valve with Cord
- Installation instructions

Operation

The optional AutoFlush System feature automatically drains the Mr.Steam® system following each use. A time delay allows the water to cool down (about two hours) before it drains by gravity for a safe and gentle operation.

Note: If the Express Steam® option has been installed, the AutoFlush will drain for ten minutes then refill with fresh water to begin the pre-heat cycle.

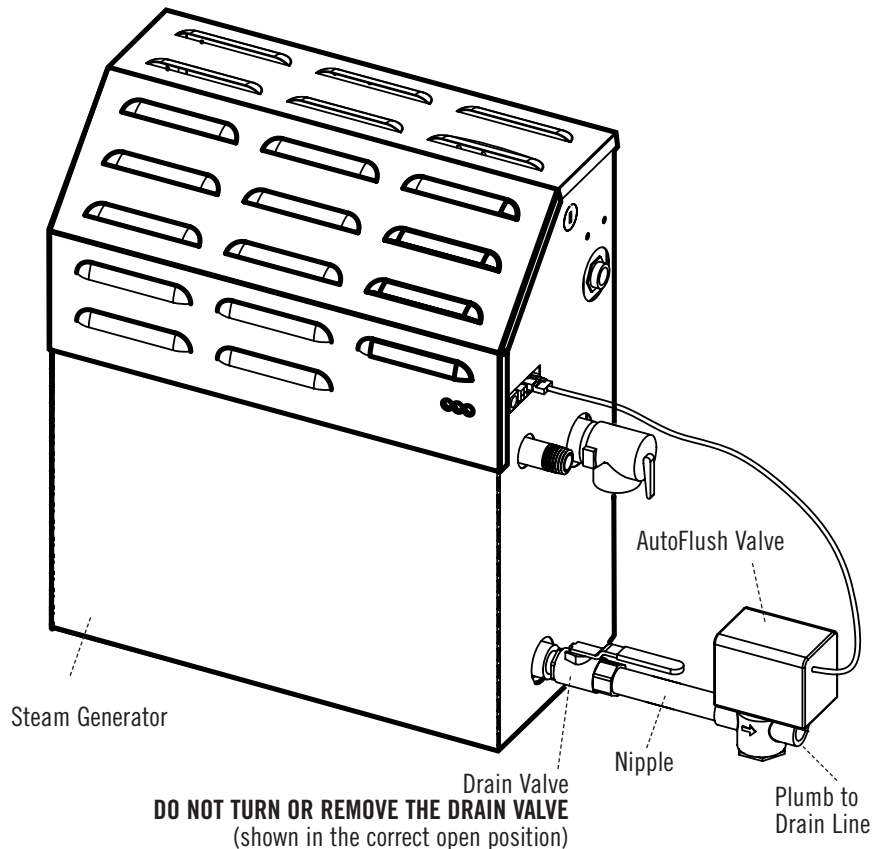

Our exclusive AutoFlush® automatically and electronically drains the system, providing CleanSteam... Every Time® and introduces fresh water.

NOTE: FOR ILLUSTRATIVE PURPOSES ONLY.

IMPORTANT: See the Mr. Steam Installation, Operation and Maintenance Manual, PUR 100472 for details.

Click here to download this manual: <http://www.mrsteam.com/support/downloads.html>



Drip Pan MS 103867

Mr. Steam strongly recommends the use of a drain pan in the unlikely event of a plumbing leak.

Locate the drain pan on a solid level surface and place the steam generator inside the drain pan. Insure the steam generator is level.

All plumbing shall be performed by a qualified licensed plumber and in accordance with applicable national and local codes. Check local plumbing code for receptor, trap and vent requirements. Drain pans drain by gravity.

The drain pan is equipped with an integral 3/4" NPT fitting.

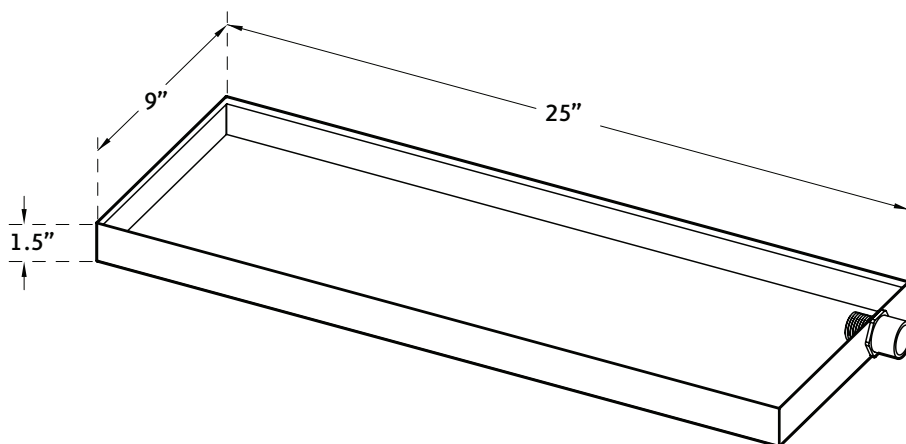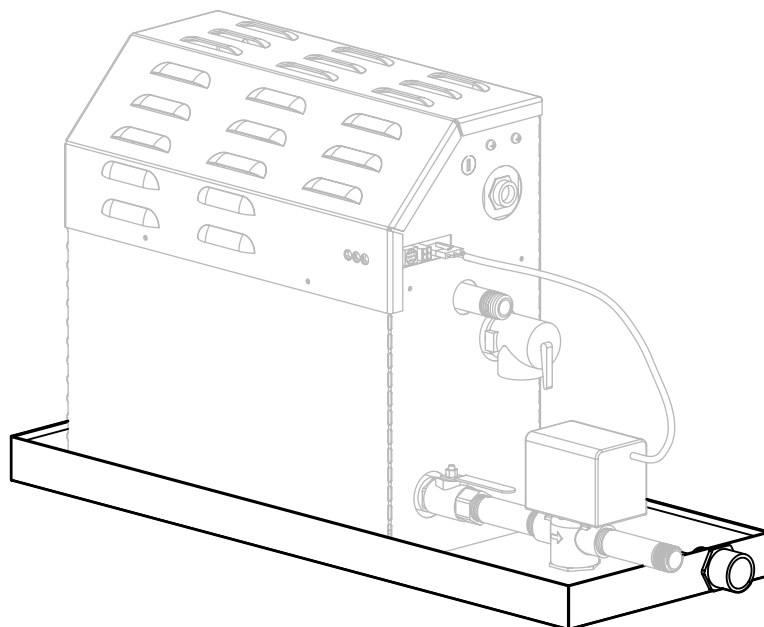

NOTE: FOR ILLUSTRATIVE PURPOSES ONLY.

IMPORTANT: See the Mr. Steam Installation, Operation and Maintenance Manual, PUR 100472 for details.

Click here to download this manual: <http://www.mrsteam.com/support/downloads.html>